

## Allen Organ Vista Navigator™ alphabetical and category listings Allen Organ Voices

<u>GENERAL MIDI</u>	Dulcimer	16	Organ Reed	21	Whistle	79	<u>THEATER</u>	Revr's Cymbal	120	
Accordion	Echoes	103	Organ Rock	19	Xylophone	14	8 Tibia	219	Snare Roll	244
Accordion Tango	English Horn	70	Phone Ring	125			8 Tibia-Vox	220	Synth Drum	119
Acoustic Bass	Fantasia	89	Piano-Bright	2	<u>BELLS</u>		8-4 Tib/Vox	221	Taiko Drum	117
Agogo	Fiddle	111	Piano-El 1	5	Bell Tree	243	16-8-4 Tibia	222	Timpani	48
Applause	Flute	74	Piano-El 2	6	Carillon	241	8 Wood Harp	237	Woodblock	116
Atmosphere	Flute Pan	76	Piano-El Gnd	3	Chimes	240	4 Wood Harp	238		
Bag Pipe	French Horn	61	Piano-Grand	1	Chrysoglott	235			<u>REED</u>	
Banjo	Fret Noise	121	Piano Honky-Tonk	4	Glockenspiel	10	<u>ORGAN FLUES</u>		16 Clarinet	176
Bass Ac Sub	Goblins	102	Piano- 16	231	Handbells	242	16 Bourdon	133	16 Clarinet +Tr	177
Bass Contra	Guitar Ac -nyl	25	Piano 16-4 Society	230	Music Box	11	8 Bourdon	140	8 Clarinet	201
Bass Finger	Guitar Ac-stl	26	Piccolo	73	Orch Bells	236	8 Bourd+Trem	141	8 Clarinet+Tr	202
Bass Finger Sub	Guitar El -Cln	28	Picked Bass	35	Tinkle Bell	113	16 Diapason	130	4 Clarion	208
Bass Frtless	Guitar El- Distor	31	Pizz String	46	Tubular Bell	15	8 English Dia	138	8 CorAng+Trm	198
Bass Frtless Sub	Guitar El -jaz	27	Polysynth	91			8 Eng Dia+Trem	139	8 CorAngalias	197
Bass Pckd Sub	Guitar El -Mut	29	Rain	97	<u>ENSEMBLE</u>		4 English Oct	154	8 Cromorne	190
Bass Slap 1	Guitar Harm	32	Recorder	75	Organ - MF	212	1 Fife	162	8 Cromorne+Tr	191
Bass Slap 2	Guitar Ovrdr	30	Sax Soprano	65	Organ - F	213	8-2 Flute	218	16 Diaphone	131
Bass Slap Sub	Gunshot	128	Sax Alto	66	Organ - FF	214	8-4 Flute	216	4 Klarine	207
Bass Syn 1 Sub	Halo	95	Sax Tenor	67	Organ - FFF	215	8-4 Flute+Trm	217	8 Krumet	195
Bass Syn 2 Sub	Harmonica	23	Sax Baritone	68			8 French Hrn	199	8 Krumet+Tr	196
Bass Synth 1	Harpsichord	7	Sci-Fi	104	<u>MIXTURE</u>		8 Fr Horn+Tr	200	16 Musette	180
Bass Synth 2	Harpsi 16-8	233	Seashore	123	Cornet V	169	8 Gedackt	144	16 Muset+Tr	181
Bassoon	Harpsi 8-4	232	Shakuhachi	78	Cornet V+Tr	170	Gedackt+Trm	145	8 Musette	193
Bird Tweet	Harp Orch	47	Shamisen	107	Cymbale III	164	4 Harm Flute	155	8 Musette+Tr	194
Blown Bottle	Helicopter	126	Shanai	112	Grand Mix IV	166	4 Harm Flt+Tr	156	16 Posthorn	172
Bowed	Kalimba	109	Sitar	105	Mixture IV	165	8 Harm Flute	146	8 Posthorn	185
Brass En+Trm	Koto	108	Soundtrack	98	5 1/3 Quinte	151	8 Harm Flt+Trm	147	16 Rankett	179
Brass Ensembl	Lead 1-sqr	81	String En 1	49	5 1/3 Quint	152	4 Octave	153	8 Rankett	192
Brass Sect	Lead 2-saw	82	String En 2	50	1 1/3 Larigo	160	2 Piccolo	159	8 Schalmei	203
Brass Syn. 1	Lead 3-calli	83	String Ensembl	227	1 1/7 Septim	161	8 Principal	136	8 Schalmi+Tr	204
Brass Syn. 2	Lead 4-Chiff	84	String Synth 1	51	Sesq II+ Trm	168	8 Princ+Trem	137	4 Schalmei	209
Breth Noise	Lead 5-chrng	85	String Synth 2	52	Sesquialt II	167	16 Quintaden	134	4 Schalmi+Tr	210
Brightness	Lead 6-Voice	86	String Trem	45	Zimbel III	163	8 Quintadena	142	8 Span Trpt	184
Bugle	Lead 7-5ths	87	Sweep	96			Quintadena +Tr	143	16 C Trumpet	175
Bugle + Trm	Lead 8-bass+	88	Synth Voice	55	<u>STRINGS &amp; CELESTE</u>				8 Trumpet	187
Cannon	Marimba	13	Thunder	247	8 Dulcin Cel	150	<u>PEDAL</u>		8 Trmpt+Trm	188
Celesta	Marimba	239	Trombone	58	16 Dulzian	178	10 2/3 Quint	135	8 Trompette	189
Cello	Melodic Tom	118	Trumpet	57	16 Gamba	132	32 Posaune	171	16 Tuba	174
Cello Ensembl	Metallic	94	Trumpet Muted	60	8 Flute Cel	149	16 Posaune	173	8 Tuba	186
Choir	Oboe	69	Tuba	59	8 Viole Cel	148	32 Violone	129	16 Vox Humana A	182
Choir Ahs	Ocarina	80	Vibraharp B	234	4 Viole	157	2 Zink	211	16 Vox Humana B	183
Choir Oohs	Orch Hit	56	Vibraphone	12	4 Viole+Trm	158			8 Vox Humana A	205
Clarinet	Organ	20	Viola	42			<u>PERCUSSION</u>		8 Vox Humana B	206
Clavinet	Organ Drawbar	17	Violin	41			Crash Cymbal	246		
Crystal	Organ Percuss	18	Warm	90			Cymbal Roll	245	<u>MIDI OFF</u>	256

## Quick-Start Guide Vista Navigator™

Refer to your owners DVD for complete operation instructions.

**Remove USB Drive:** **Important!** Never remove the USB flash device from the Vista Navigator USB port without first using this function.

**Toggle Voice On/Off:** Touch the blue voice bubble. A white border around the voice means it is active; no border means the voice is muted.

**Edit a voice:** Press “EDIT” . All voice selection bubbles will turn to a green color. Select the voice to edit. (See picture below)

**Select a MIDI voice:** 1) by MIDI voice number or 2) by MIDI voice name. To select a MIDI voice by number, press the MIDI voice number bubble within the Voice name block and enter the number of the voice you have selected. To select a MIDI voice by name, press the MIDI voice name bubble in the Voice name block, scroll, and select. (See picture below)

**Key Limits:** Scroll and select the note to select the limit note. **Short Cut!** Press the corresponding note on the organ keyboard to enter the Key Limit: Low or High values.

**Variable Velocity-volume:** Similar to that of a piano, the harder a kit is played the louder or accented the sound will be. Requires velocity-sensitive keyboards to function.

**Fixed Velocity adjustment:** press the button labeled NORMAL in the Velocity block and change the value. Higher number equals more volume.

### **Save Settings to a piston:**

Set your general or division piston with organ voices if desired; including the “MIDI” tab.

Edit your MIDI voices in Vista Navigator as desired.

Exit the edit mode and push “SAVE” on the screen.

Push the piston to save the settings. Do NOT use the “Set” button.

### **Copy Midi favorite settings to other pistons or memories:**

Select the piston where your favorite midi setting is stored.

Press “Save” on the Vista Navigator screen.

Press another piston to copy those settings to the new piston.

To copy to a different memory level– change to the new memory level before pushing the piston.

