

MDS-50


Copyright © 1990 Allen Organ Company
All Rights Reserved

AOC P/N 033-0038



All warning and safety instructions pertain to the organ and the amp rack (if required).

Explanation of Graphical Symbols:

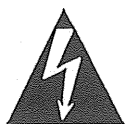

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the instrument's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the instrument.

Warning: To reduce the risk of fire or electrical shock, do not expose this instrument to rain or moisture. Do not plug the instrument into any current source other than 105-128 volts, 50/60 Hertz alternating current (AC). A certified grounded outlet is essential to proper operation and protection of the instrument. Proper polarity should be checked with an AC circuit analyzer before connecting the instrument.

To reduce the risk of electrical shock, match the wide blade of the instrument AC cord power plug to the wide slot in the receptacle and fully insert the plug into the receptacle.

Do not change the cable plug or remove the ground pin or connect with a two-pole adapter.

If you are in doubt about your electrical connection, consult your local electrician or power company.

For safety reasons, make sure any equipment or accessories connected to this instrument bear the UL listing symbol.

Read and comply with all instructions and labels that may be attached to the instrument.

In churches where circuit breakers are turned off between worship services, the circuit breaker affecting the organ console AC power should have a guard installed to prevent its being accidentally switched off.

IMPORTANT SAFETY INSTRUCTIONS

These safety instructions are provided to reduce the risk of fire, electric shock and injury. **WARNING** -- When using electric products, basic precautions should always be followed, including the following:

1. Read and understand all instructions and warnings.
2. This product may be equipped with a polarized line plug (one blade wider than other). This is a safety feature. If you are unable to insert plug into outlet, contact an electrician to replace obsolete outlet. Do not defeat the safety purpose of the plug.
3. Do not overload wall outlets and extension cords. This can increase the risk of fire or electric shock.
4. Do not allow anything to rest on the power cord.
5. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
6. Unplug the organ from the wall outlet and consult qualified service personnel in any of the following situations.
 - The power supply cord is frayed or damaged.
 - Liquid has been spilled into the product.
 - The product has been exposed to water.
 - The product does not appear to operate normally or exhibits a marked change in performance.
 - The product has been dropped, or the enclosure damaged.
7. This product, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
8. Do not attempt to service the product beyond that described in the owners manual. All other servicing should be referred to qualified service personnel.

Grounding instructions - This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER -- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

SAVE THESE INSTRUCTIONS

ALL WARNING AND SAFETY INSTRUCTIONS PERTAIN
TO THE ORGAN AND THE AMP RACK (IF REQUIRED)

重要な安全上の注意

この安全上の注意書は火災・感電・傷害の危険を避けるためのものです。

警告—電気製品を使用する際は、以下の基本的な注意を常に守って下さい：

1. 取扱説明書と注意書きに全て目を通して下さい。
2. この製品には極性プラグ（一方の刃がもう一方よりも幅広いもの）が取り付けられています。これは安全を確保するためのものです。コンセントに電源プラグを差し込めない場合は、電気技術者に連絡をとり、旧型のコンセントを新しいものに取り替えて下さい。極性プラグの安全目的を妨げないようにして下さい。
3. コンセントと延長コードに負荷をかけ過ぎないで下さい。火災と感電の危険があります。
4. 電源コードの上には何も置かないで下さい。
5. 内部に、物を落としたり液体をこぼしたりしないよう、注意してください。
6. 次の場合にはコンセントからオルガンの電源コードを抜き、専門のサービスマンに相談して下さい。

- 電源コードがすり切れたり傷んでいる。
- 製品の中に液体をこぼした。
- 製品を水に濡らした。
- 製品が正常に動作しない、性能に著しい変化が見られる。
- 製品を落としてしまった、外装が破損した。

7. この製品は、単独でも、あるいはアンプやヘッドフォンやスピーカーと組み合わせることによって、慢性的な難聴の原因となる程の音量を出すことが出来ます。大きなボリューム・レベルや、不快なレベルで、長時間使用しないで下さい。少しでも難聴や耳鳴りを感じたら、専門医に相談して下さい。
8. オーナーズ・マニュアルに書かれた内容以外に製品の修理をしようとししないで下さい。その他の調整・修理は専門のサービスマンにおまかせ下さい。

接地（アース）に関する指示—この製品は必ずアースを取らなくてはなりません。誤動作や故障が生じた際、アースしておくことで、抵抗が最小の電流経路が確保され、感電の危険を減らすことになります。この製品の電源コードにはアース線と接地プラグがついています。電源プラグは、関連法規に従って正しく取り付けられアース付きコンセントに差し込まなくてはなりません。

危険—アース線の取り方を誤ると、感電する危険があります。もし製品が正しくアースされているかどうか疑わしい時は、専門の電気技術者かサービスマンに点検を依頼して下さい。製品に付いている電源プラグを変更しないで下さい。もしコンセントに合わないような場合は、専門の電気技術者に正しいコンセントを取り付けてもらって下さい。

以上の指示をお守り下さい

CONSIGNES DE SECURITE IMPORTANTES

Les consignes de sécurité ci-dessous sont destinées à réduire les risques de feu, de court-circuit et de blessure.

ATTENTION : En utilisant des produits électriques, les précautions de base doivent toujours être prises, y compris les suivantes :

1. Lire et respecter toutes les instructions et les avertissements,
2. Ce produit est équipé d'une prise d'alimentation où les polarités sont repérées (les plots de connexion ne peuvent pas être inversés). Ceci est une mesure de sécurité. Si vous ne pouvez pas connecter la prise d'alimentation de l'instrument à votre prise murale, contactez un électricien pour la remise en conformité de votre prise. Ne supprimez jamais la terre de la prise d'alimentation.
3. Ne surchargez pas les prises murales et les rallonges. Ceci pourrait accroître les risques d'incendie ou de court-circuit.
4. Ne rien poser sur le câble d'alimentation.
5. Il convient de faire attention à ce que des objets et des liquides ne soient pas renversés dans la console par les ouvertures.
6. Débranchez l'orgue et consultez un technicien Allen dans tous les cas suivants :
 - le cordon d'alimentation est détérioré,
 - du liquide a été renversé dans l'instrument,
 - l'instrument a été exposé à l'eau,
 - l'orgue ne paraît pas fonctionner normalement ou montre des performances altérées.
 - l'instrument est tombé et la console est abîmée.
7. Cet instrument, seul ou en combinaison avec un amplificateur et un casque ou des haut-parleurs, est capable de produire des niveaux de sons qui pourraient causer une perte permanente d'audition. Ne travaillez pas pendant une longue durée à un volume élevé ou à un volume inapproprié. Si vous constatez une perte auditive ou des bourdonnements, consultez un spécialiste.
8. Ne pas intervenir dans l'appareil au-delà de ce qui est indiqué dans le manuel de l'utilisateur. Toutes les autres interventions doivent être confiées à un technicien Allen.

Instructions de base :

L'instrument doit être équipé d'une prise de terre. Dans le cas d'un dysfonctionnement ou d'une panne, la mise à la terre fournit un chemin de moindre résistance au courant électrique pour réduire le risque de court-circuit.

Cet orgue est équipé d'un câble ayant un fil de terre et une prise de terre. La prise doit être branchée dans une prise adéquate correctement installée et équipée de la terre conformément à toutes les normes en vigueur.

DANGER :

Une connexion impropre du fil de terre peut provoquer un court-circuit. Si vous avez un doute, vérifiez avec un électricien qualifié que le produit est correctement relié à la terre.

Ne modifiez pas la prise fournie avec le produit. Si elle ne se connecte pas avec la prise d'alimentation murale, faites installer une prise murale correcte par un électricien qualifié.

RESPECTEZ CES INSTRUCTIONS

Wichtige Sicherheitsvorschriften

Diese Sicherheitsvorschriften sollen die Feuer-, Kurzschluß- und Verletzungsrisiken herabsetzen.

Warnung: Während des Gebrauchs von elektrischen Geräten sollten Sie grundsätzlich immer Vorsichtsmaßnahmen beachten, einschließlich der folgenden:

1. Lesen Sie immer alle Beschreibungen und Warnungshinweise.
2. Dieses Gerät wurde mit einem eindeutigen Netzstecker versehen (Ein Kontakt ist größer als der andere). Dies ist eine Sicherheitsmaßnahme. Wenn der Stecker nicht in die Steckdose paßt, beauftragen Sie einen Elektriker mit der Änderung der Steckdose. Beseitigen Sie keinesfalls die Sicherheitsfunktion des Steckers.
3. Überlasten Sie nicht Wandsteckdosen und Kabel. Dies erhöht die Brand- und Kurzschlußgefahr.
4. Lassen Sie keine Gegenstände auf den Leitungen liegen.
5. Verhindern Sie, daß Gegenstände in die geöffnete Anlage fallen oder Nässe eindringt.
6. Trennen Sie die Orgel von der Steckdose und beauftragen Sie Fachpersonal in folgenden Fällen:
 - ♦ das Netzkabel ist gerissen oder beschädigt
 - ♦ Feuchtigkeit ist in das Gerät eingedrungen
 - ♦ Das Gerät wurde dem Wasser ausgesetzt
 - ♦ Das Gerät arbeitet nicht normal oder zeigt Fehler im Betriebszustand
 - ♦ Das Gerät ist gefallen oder das Gehäuse wurde beschädigt
7. Dieses Gerät, ob alleine oder in Verbindung mit externen Verstärker und Lautsprecher oder Kopfhörer benutzt, ist imstande, extreme Lautstärken zu erzeugen, was bei langzeitigem Gebrauch Hörschäden hervorrufen kann.
8. Versuchen Sie nicht das Gerät zu reparieren oder abzuändern, beachten Sie die Betriebsanleitung. Service und Reparaturen obliegen ausschließlich qualifiziertem Personal.

Grundsätzliche Instruktionen:

Dieses Gerät muß geerdet werden. Ist die Erdung nicht vorhanden oder unterbrochen, hat dies eine Minderung des elektrischen Schutzes vor Kurzschluß zur Folge. Dieses Gerät ist mit einem dreipoligen (Phase, Neutral und Erde) Stecker ausgestattet. Der Stecker muß an eine zugelassene, sorgfältig installierte und geerdete Steckdose angeschlossen werden, in Übereinstimmung mit den örtlichen gesetzlichen Bestimmungen.

Gefahr !! eine unvorschriftsmäßige Erdung und Anschluß erhöht die Gefahr eines elektrischen Schlag. Falls Sie Zweifel haben, ob Ihr elektrischer Anschluß richtig geerdet ist, lassen Sie ihn von einem Elektriker überprüfen. Nehmen Sie niemals Änderungen an dem Netzstecker des Gerätes vor - wenn er nicht paßt, beauftragen Sie einen qualifizierten Elektriker mit der Installation eines vorschriftsmäßigen Anschlusses.

Bewahren Sie diese Instruktionen sorgfältig auf

ALLEN ORGAN COMPANY

For over fifty years--practically the entire history of electronic organs--the Allen Organ Company has sought to build the finest organs that technology would allow.

In 1939, Allen built and marketed the world's first purely electronic oscillator organ. The tone generators for this first instrument used two hundred forty-four vacuum tubes, contained about five thousand components, and weighed nearly three hundred pounds. Even with all this equipment, the specification included relatively few stops.

By 1959, Allen had replaced vacuum tubes in the oscillator organs with transistors. Thousands of transistorized instruments were built, including some of the largest, most sophisticated oscillator organs.

Only a radical technological breakthrough could improve upon the fine performance of Allen's solid-state oscillator organs. Such a breakthrough came in conjunction with the U.S. Space Program in the form of highly advanced digital microcircuits.

Your MDS organ is the product of years of refinement in digital techniques by Allen engineers. It represents the apex of computer technology applied to exacting musical tasks. The result is an instrument of remarkably advanced tone quality and performance.

Congratulations on the purchase of your new Allen Digital Computer Organ! You have acquired the most advanced electronic organ ever built, one that harnesses a modern computer to create and control beautiful organ tones.

Familiarize yourself with the instrument by reading through this booklet. We call your attention particularly to sections on Second Voicing, Alterable Voices (Card Reader), Transposer, Console Controller™, and Capture Action, since these elements are important to realizing the full potential of the instrument.

The sections on stop description and organ registration are intended for immediate use as well as for future reference. Because the Allen Digital Computer Organ offers limitless tonal possibilities, plus authentic tone quality, these subjects can now be more readily explored than ever before.

Contents

I.	Description of Stops	1
II.	Artistic Registration	12
III.	Second Voicing	19
IV.	Alterable Voices (Card Reader).....	20
V.	Transposer.....	22
VI.	Console Controller™	23
	A. Performance Recorder™	34
VII.	Capture Combination Action.....	38
VIII.	Installation, Voicing, and Care of the Organ	40

DESCRIPTION OF STOPS

PITCH FOOTAGE

The number appearing on each stop along with its name indicates the "pitch" or "register" of the particular stop. It is characteristic of the organ that notes of different pitches may be sounded from a single playing key. When this sound corresponds to the actual pitch of the playing key, the note (or stop) is referred to as being of 8' pitch; therefore, when an 8' stop is selected and middle C is depressed, the pitch heard will be middle C. If it sounds an octave higher, it is called 4' or octave pitch. If it sounds two octaves higher, it is called 2' pitch, while a stop sounding three octaves higher is at 1' pitch. Likewise, a 16' stop sounds an octave lower, and a 32' stop sound two octaves lower.

Stops of 32', 16', 8', 4', 2', and 1' pitch all have octave relationships, that is, these "even numbered" stops all sound octaves of whatever key is depressed. Pitches other than octaves are also used in organ work. Their footage number always contains a fraction, and they are referred to as mutations. Among these are the Nasard and Quinte $2\frac{2}{3}'$, Tierce $1\frac{3}{5}'$, and Quintflöte $1\frac{1}{3}'$. Because they introduce unusual pitch relationships with respect to the fundamental (8') tone, they are most effective when combined with other stops and used either in solo passages or in small ensembles of flutes (see explanation of Cornet in Section II).

TONAL FAMILIES

Organ tones divide into two main categories: flues and reeds. In a pipe organ, flue pipes are those in which the sound is set in motion by wind striking directly on the edge of the mouth of the pipe. Flues include principal tones, flute tones, and string tones. Compound stops and hybrid stops are "variations" within these three families.

The term "imitative" means that the organ stop imitates the sound of the corresponding orchestral instrument; for example, an imitative "Viola 8'" would be a stop voiced to sound like an orchestral viola.

Principal Voices

Principal
Diapason
Octave
Superoctav
Quinte

Characteristic organ tone, not imitative of orchestral instruments. Usually present at many pitch levels, as well as in all divisions. Rich, warm, and harmonically well developed.

Flute Tones

Open Types:

Harmonic Flute
Melodia
Flute mutation stops

Voices of lesser harmonic development than principals. Open types somewhat imitative; stopped types not. Present at all pitch levels and in all divisions.

Stopped Types:

Gedackt, Bourdon,
Quintadena
Rohrflöte

String Voices

Salicional
Viola
Voix Céleste

Mildly imitative voices of brighter harmonic development than principal. Usually appear at 8' pitch.

Compound Voices

Mixture
Cornet

Voices produced by more than one rank sounding simultaneously.

Hybrid Voices

Gemshorn
Erzähler
Spitzflöte

Voices that combine the tonal characteristic of two families of sound, e.g., flutes and principals, or strings and principals.

In *reed* pipes, a metal tongue vibrates against an opening in the side of a metal tube called a shallot. The characteristic sounds of different reeds are produced through resonators of different shapes. The family of reeds subdivides as follows:

Reed Voices

Chorus or
Ensemble Types:

Voices of great harmonic development; some imitative,
others not.

Trumpet, Posaune,
Clairon

Solo Types:

Hautbois, Clarinet,
Krummhorn

The Allen Digital Computer Organ provides authentic examples of various types of voices as listed above. Some of these are protected by copyrights owned by the Allen Organ Company. The voices are stored in memory devices, each having affixed to it a copyright notice; e.g., © 1990 AOCO, © 1991 AOCO, etc., pursuant to Title 17 of the United States Code, Section 101 et seq.

Following is a discussion of individual stops and how they are generally used. Please note that slight variations in specifications may be encountered.

MDS-50 STOPLIST

PEDAL ORGAN

Contre Bourdon 32'	Deep flute tone that adds "rumble" to a full combination.
Diapason 16'	The 16' member of the Pedal diapason chorus. Strongest pedal flue stop.
Bourdon 16'	Stopped flute tone of weight and solidity.
Lieblichgedackt 16'	Softer stopped flute of delicacy and definition. Useful where soft 16' pitch is required.
Octave 8'	8' member of the Pedal principal chorus.
Gedacktflöte 8'	Stopped flute tone of 8' pitch, useful in adding clarity to a pedal line in combination with the Bourdon 16' or Lieblichgedackt 16'.
Choralbass 4'	Pedal 4' principal tone.
Flûte Ouverte 4'	Open flute tone of 4' pitch.
Mixture IV	Compound stop of principal tones. One pedal produces four distinct pitches at octave and fifth relationships to the pedal being pressed. Used to crown the Pedal principal chorus.
Posaune 16'	A strong Pedal reed that lends strength and "snarl" to the Pedal line.
Trompette 8'	Clear Pedal reed useful in adding definition to a full Pedal combination, or as a solo Pedal trumpet.
Schalmei 4'	A bright 4' chorus reed. Combines with the Posaune 16' and Trompette 8' to form the full Pedal reed chorus. Particularly useful as a solo voice.

COUPLERS

Great to Pedal	Connects all Great stops to the Pedal.
Swell to Pedal	Connects all Swell stops to the Pedal.
Choir to Pedal	Connects all Choir stops to the Pedal.
Alterable to Pedal	Connects only Alterable Voices to the Pedal.
MIDI to Pedal	Opens MIDI channel to the Pedal.

SWELL ORGAN

Viola 8'	String tone with a bright timbre.
Viola Celeste 8'	Celeste used with the 8' Viola, creating a warm string tone.
Flûte Bouchée 8'	Chiffing stopped flute tone of moderate harmonic development. Provides the 8' member of the Swell flute chorus and is useful by itself or with other flutes and mutations in creating solo voices.
Principal Conique 4'	Bright principal tone.
Flûte à Fuseau 4'	Distinctive flute voice with chiff that works well in ensembles of flutes or strings, or as a solo voice.
Nasard 2-2/3'	Flute mutation that sounds one octave and a fifth above the keys played. Always used with other stops (usually beginning with 8') for coloration.
Flûte à Bec 2'	A delicate, clear open flute at 2' pitch.

Tierce 1-3/5'	Flute mutation that causes the pitch to sound a seventeenth (two octaves and a third) higher than played. Used with 8' stops or flute ensembles.
Fourniture IV	Compound stop of principal tones. Each note played produces four distinct pitches at octave and fifth relationships to the key being pressed. The mixture should never be used without stops of lower pitches. The Fourniture IV is typically added to diapason or flute ensembles, or to a reed chorus.
Basson 16'	Chorus reed tone at the 16' pitch level, designed to supplement and undergird the other chorus reeds. Also usable as a distinctive solo reed.
Trompette 8'	Chorus reed stop of rich harmonic development. Can also be used as a solo voice.
Clairon 4'	A bright 4' chorus reed. Combines with the Basson 16' and Trompette 8' to form the full Swell reed chorus. Also usable as a solo voice.
Alterable Voice	See separate section on Alterable Voices.
Alterable F (forte)	Increases the volume of the Alterable stop.
Alterable Percussion	Produces percussive attack and release dimension appropriate to percussion type voices. Use with green Alterable Voice cards.
Tremulant	Use of this stop provides a vibrato effect, natural in the human voice and wind instruments, when used with stops in the Swell division.
Orchestral Voices On	See separate section on Second Voicing.
MIDI to Swell	Opens MIDI channel to Swell.

GREAT ORGAN

Gemshorn 16'	Hybrid stop that combines tonal characteristics of the string and flute families, resulting in a light diapason quality. Useful accompanimental voice.
Prinzipsal 8'	Foundation stop of the Great principal chorus.
Rohrflöte 8'	Full-bodied, partially stopped flute tone.
Octav 4'	The 4' member of the Great principal chorus, which consists of the Prinzipsal 8', Octav 4', and Superoctav 2'.
Spitzflöte 4'	Partially closed flute tone.
Quinte 2-2/3'	Principal mutation that causes the pitch to sound an octave and a fifth higher than played.
Superoctav 2'	An open metal stop that produces foundation tone at the 2' pitch level.
Mixture IV	A compound stop of principal tones. Four notes in octave and fifth relationships sound together when a single key is depressed. As pitches progress upward, they "break" back to the next lower octave or fifth. Used to cap the Great principal chorus, adding brilliance and pitch definition throughout the entire compass.
Trompete 8'	German trumpet useful as a smooth solo voice or chorus reed.
Tremulant	Same as Tremulant in Swell, but affects stops in the Great and Pedal, except for the bottom octave in both divisions.
Second Voices On	See separate section on Second Voicing.

Swell to Great	Intermanual coupler connecting all Swell stops to the Great manual.
Choir to Great	Intermanual coupler connecting all Choir stops to the Great manual.
Alterable to Great	Intermanual coupler connecting only Alterable stops to the Great manual. See section on Alterable Voices.
MIDI to Great	Opens MIDI channel to Great.

CHOIR ORGAN

Erzähler 8'	Hybrid stop that combines tonal characteristics of the string and flute families, resulting in a small-scale gemshorn. Useful accompanimental voice.
Holzgedackt 8'	Chiffing stopped wooden flute tone. Provides the 8' member of the Choir flute chorus and is useful by itself or with other flutes and mutations in creating solo voices.
Prestant 4'	Bright 4' French principal.
Koppelflöte 4'	Distinctive flute voice with chiff that works well in ensembles of flutes or strings, or as a solo voice.
Nasard 2-2/3'	Flute mutation that sounds one octave and a fifth above the keys played. Always used with other stops (usually beginning with 8') for coloration.
Oktav 2'	An open metal stop that produces foundation tone at the 2' pitch level.
Quintflöte 1-1/3'	Open flute mutation that causes the pitch to sound a nineteenth (two octaves and a fifth) higher than played. Used with 8' stops or flute ensembles.

Sifflet 1'	An open metal flute stop. The highest stop in the Swell flute chorus.
Cymbale III	Compound stops of principal tone. Each note played produces three distinct pitches at octave and fifth relationships to the key being pressed. The mixture should never be used without stops of lower pitches. The Cymbale III is typically added to diapason or flute ensembles.
Krummhorn 8'	The tone quality of the shawm, a medieval ancestor of the clarinet, is the basis for this light, bright, nasal reed. It can be used alone as a solo stop or in combination with light flues for a somewhat rounder reed solo effect.
Tremulant	Use of this stop provided a vibrato effect, natural in the human voice and wind instruments, to the stops in the Choir division.
Swell to Choir	Intermanual coupler connecting all Swell stops to the Choir manual.
Alterable to Choir	Connects the Alterable Voice to the Choir.
MIDI to Choir	Opens MIDI channel to Choir.

GENERALS

Bass Coupler	When this coupler is used, the lowest note played on the Great manual will automatically key the appropriate Pedal note, playing those stops that have been drawn in the Pedal division as well as those in the Great division.
Melody Coupler	When used with an appropriate solo stop, such as a Swell reed or 2nd voice orchestral stop, this feature will automatically key the highest note played on the Great, allowing accentuation of the melody.

Romantic Tuning Off

When activated, a second, "tight" tuning is drawn, resulting in a less warm sound.

Swell Main Off &
Gt./Pd./Ch. Main Off

Used in conjunction with the Swell to Antiphonal and Gt./Pd./Ch. to Antiphonal tablets. This causes the organ to speak from the Antiphonal speakers and not from the Main speakers.

Swell to Antiphonal &
Gt./Pd./Ch. to Antiphonal

Causes the organ to speak from the Antiphonal speakers. The organ will speak from both Antiphonal and Main divisions unless the Main Organ Off is also added.

Reverb

Stop engages reverberation system.

EXPRESSION PEDALS

There are three expression pedals on the MDS-50. The one on the far right is the Crescendo pedal (see below). The pedal on the left expresses the Great, Choir, and Pedal divisions, while the center expression pedal affects the Swell.

CRESCENDO PEDAL

One master Crescendo, for all divisions, gradually adds stops as this pedal is opened. Indicator lights show relative position of the pedal. Crescendo B is a secondary Crescendo that can be programmed by the organist (see p. 28). Indiscriminate use of the Crescendo pedal, in lieu of careful registration, should be avoided.

TUTTI I & II

The Tutti I and II are settings of full organ registration. Tutti II is a fuller registration than Tutti I, most noticeably in the Pedal division. They are turned on by using manual pistons located beneath the Swell manual directly above the cancel button. The pistons are reversible, meaning that pressing them will turn the corresponding Tutti on or off. The cancel button will also turn off the Tuttis. Pressing Tutti II will cancel Tutti I. Red signal lights, appropriately labeled and located on the right side of the console to the left of the expression indicators, turn on when Tutti I or II is in operation. A second set of Tuttis can be programmed by the organist (see p. 28). Like the Crescendo, indiscriminate use of these devices should be avoided.

CELESTES

Celestes are created by using two sounds, one tuned slightly sharp or flat of the other, creating a warm, undulating "celestial" effect. The combination of the Viola 8' and the Viola Celeste 8' in the Swell division will create a beautiful string celeste.

ARTISTIC REGISTRATION

Organ registrations fall into two broad categories: solo combinations and ensembles.

A solo combination is one in which a melody is played on one keyboard, the accompaniment on another keyboard, and the pedal often provides a light bass line. Almost any stop or combination of stops will sound good as a solo voice. A contrasting tone quality should be chosen for the accompaniment, so that the accompaniment is softer than the solo voice. The Pedal needs to provide a foundation for the sound without covering it.

Most 8' reed stops make interesting solo voices. The addition of a 4' flute or a flute mutation (e.g., Nasard or Tierce) to a light reed such as the Hautbois colors the sound further and increases its volume slightly. Adding an 8' flute to a reed will add body to the sound.

Flutes can be used alone or in combinations as solo voices. One special combination of flutes that creates an appealing and historically significant solo combination is the Cornet (pronounced kor-NAY). The Cornet is created by using the following Swell stops: Flûte Bouchée 8', Flûte à Fuseau 4', Nasard 2-2/3', Flûte à Bec 2', and Tierce 1-3/5'. This solo combination was used widely in Baroque organ music, but it is just as appropriate for some modern music. Useful variations of the Cornet may be achieved by eliminating the 4', the 2', or both.

When choosing stops for a solo voice, it is not always necessary to include an 8' stop; for example, since the 4' flute has a tone quality different from that of the 8' flute, the 4' flute can be used as an independent solo voice. By playing the solo an octave lower than written, the notes will sound at the correct pitch. In similar fashion, a 16' stop can be selected and the notes played an octave higher than written. Tonal variety will be gained, because each stop has its own tone color.

For accompaniment, the most desirable voices are the 8' flutes and strings on each manual. Celestes often make effective accompaniments. The correct choice depends on the volume of the solo tone (a soft solo voice requires the softest accompanimental stop), the element of contrast, and the location of the solo stop. A bright, harmonically rich solo reed, for example, can be accompanied by either a string or flute, but the flute will often contribute greater interest because of its greater contrast.

Try to seek a "natural" balance of volume between solo and accompaniment. This will be especially helpful if the solo and accompaniment are under separate expression.

SUGGESTED SOLO REGISTRATIONS

OBOE SOLO

Swell: Orchestral Oboe using Orchestral Voices On (Tremulant optional)
Great: Rohrflöte 8'
Choir: Erzähler 8'
Pedal: Lieblichgedackt 16', Great to Pedal

CHIMES SOLO

Swell: Flûte Bouchée 8', Viola 8', Viola Celeste 8'
Great: Chimes (Rohrflöte 8'), 2nd Voices On
Choir: Erzähler 8'
Pedal: Lieblichgedackt 16', Swell to Pedal

Play solo on Great.

MELLOW REED SOLO

Swell: Flûte Bouchée 8', Viola 8', Viola Celeste 8'
Great: Trompète 8', Tremulant
Choir: Holzgedackt 8', Koppelflöte 4'
Pedal: Lieblichgedackt 16', Swell to Pedal

Play solo on Great.

SWELL SOLO COMBINATION

Swell: Flûte Bouchée 8', Flûte à Fuseau 4', Nasard 2-2/3', Flûte à Bec 2', Tierce 1-3/5'
(Tremulant optional)
Great: Rohrflöte 8'
Choir: Erzähler 8'
Pedal: Lieblichgedackt 16', Gedacktflöte 8'

Play solo on Swell.

FLUTE SOLO

Swell: Flûte Bouchée 8' (Tremulant optional) or Flûte à Fuseau 4'
Great: Rohrflöte 8'
Choir: Erzähler 8'
Pedal: Lieblichgedackt 16', Choir to Pedal

Play solo on Swell.

TRUMPET SOLO

Swell: Trompette 8', Brass I (Basson 16'), Brass II (Nasard 2-2/3'), 2nd Voices On
Great: Prinzipal 8', Octav 4', Superoctav 2', Mixtur IV
Choir: Holzgedackt 8', Koppelflöte 4'
Pedal: Diapason 16', Octave 8', Choralbass 4', Mixture IV

Play solo on Swell.

These few combinations demonstrate basic techniques of solo registration. In creating registrations of your own, remember these three simple rules:

1. Seek tonal contrast between solo and accompaniment.
2. Be sure the solo is louder than the accompaniment.
3. Choose a solo whose character is appropriate to the specific piece.

ENSEMBLE REGISTRATIONS

Ensemble registrations involve groups of stops that are played together, usually, but not always, with both hands on one keyboard. They are characterized by compatibility of tone, clarity, and occasionally power. Such registrations are used in hymn singing, choir accompaniments, and much of the contrapuntal organ literature.

Volumes have been written on the subject of ensemble registration. Following is a summary of the major points.

Ensembles are created by combining stops. Two factors are always to be considered: tone quality and pitch. Ensembles begin with a few stops at the 8' and/or 4' pitch and expand "outward" in pitch as they build up. New pitches are usually added in preference to another 8' stop.

Ensembles are generally divided into three tonal groupings or "choruses":

The principal chorus is the most fully developed with representation in various divisions of the organ and at every pitch from 16' (Diapason) to high mixtures. The principal chorus is sometimes called the narrow-scale flue chorus, a pipe reference to the relative thinness of principal pipes in relation to their length.

The flute chorus is also well represented with a diversity of stops at various pitches. Generally speaking, the flute chorus is composed of less harmonically developed tones, and is smoother and of lesser volume than the principal chorus. The flute chorus is sometimes called the wide-scale flue chorus, owing to the generally "fatter" look of flute pipes as compared to principals.

The reed chorus includes those reed tones designed to be used in the ensemble buildup. Not all reed voices are ensemble tones. An Hautbois, for example, is usually a solo stop. The various Trumpets, Clairons, Bassons, etc., are usually ensemble voices that add brilliance, power, and incisiveness to the sound. If you have questions as to whether a specific reed is a solo or ensemble stop, refer to the stop glossary in the preceding section.

The Swell reed chorus of Basson 16', Trompette 8', and Clairon 4' represents an entity important to French organ music and the full ensemble of the organ. These stops create a "blaze" of richly harmonic sounds that tops off both flue choruses.

Another special ensemble combination important in French music is the Cornet, which was discussed in the section on Solo Registration. This combination can be used with the chorus reeds and mutations to create the "Grand Jeu." The Cornet is also useful in Romantic ensembles to add weight and thickness to the sound.

Here are typical ensemble combinations for the Great, Swell, and Choir manuals:

Great

1. Rohrflöte 8', Spitzflöte 4'
2. Rohrflöte 8', Spitzflöte 4', Superoctav 2'
3. Prinzipal 8', Octav 4'
4. Prinzipal 8', Octav 4', Superoctav 2'
5. Prinzipal 8', Octav 4', Superoctav 2', Mixture IV
6. Prinzipal 8', Octav 4', Superoctav 2', Mixture IV, Trompete 8'

Swell

1. Flûte Bouchée 8', Flûte à Fuseau 4'
2. Flûte Bouchée 8', Flûte à Fuseau 4', Flûte à Bec 2'
3. Flûte Bouchée 8', Principal Conique 4'
4. Flûte Bouchée 8', Principal Conique 4', Flûte à Bec 2', Fourniture IV
5. Flûte Bouchée 8', Principal Conique 4', Flûte à Bec 2', Fourniture IV, Trompette 8'
6. Flûte Bouchée 8', Principal Conique 4', Flûte à Bec 2', Fourniture IV, Basson 16', Trompette 8', Clairon 4'

Choir

1. Erzähler 8', Koppelflöte 4'
2. Erzähler 8', Koppelflöte 4', Oktav 2'
3. Holzgedackt 8', Prestant 4'
4. Holzgedackt 8', Prestant 4', Oktav 2', Sifflet 1'
5. Holzgedackt 8', Prestant 4', Oktav 2', Sifflet 1', Cymbale III
6. Holzgedackt 8', Prestant 4', Nazard 2-2/3', Oktav 2', Sifflet 1', Cymbale III

The use of the Swell to Great coupler allows these separate ensembles to be combined on the Great manual. It is also possible to combine some of these ensembles within the same division; for example, the #2 and #4 registrations suggested above for use on the Great combine to form a nice round hymn combination.

The Pedal ensemble is created in much the same way as the manual ensembles, starting at 16' pitch instead of 8'. Be careful that the volume of the pedals is not greater than that of the manuals. Although the manual to pedal couplers are useful in bringing clarity to the pedal line, especially on softer registrations, avoid the temptation to rely constantly on one or two 16' stops and a coupler. Please note that the softest stops and flute mutations are normally not used with ensembles.

FULL ORGAN

Due to the immense capabilities of the Allen Digital Computer Organ, every stop and coupler on the instrument could be used simultaneously without distortion, if the organ is adjusted properly. In good registration practice, however, the organist would not haphazardly put on every stop on the instrument. For best results, listen and include only those stops that really contribute to the fullness and brilliance of the ensemble. Eliminate soft stops and solo stops that make no purposeful contribution.

This short treatment barely scratches the surface of the fascinating subject of organ registration. For those interested in gaining further insight into this vital area of organ playing, we recommend the following texts:

Audsley, George Ashdown. *Organ Stops and their Artistic Registration*.

Hialeah, FL: C.P.P. Belwin, 1985.

Irwin, Stevens. *Dictionary of Pipe Organ Stops*. 2nd ed.

New York: Macmillan Books, 1983.

SECOND VOICING

In addition to the comprehensive list of standard organ sounds on the MDS-50, there are many special percussion and orchestral stops that can be accessed with the "2nd Voices On" and "Orchestral Voices On" controls.

In the Great division, the second voices are percussion stops: Chimes, Celesta, Chrysoglott, Harpsichord 4', and Harpsichord 8'. The Second Voices are marked in red on their respective stop tablets. They may be activated by first depressing the "2nd Voices On" stop tablet and then selecting the voice of your choice.

The Second Voices in the Swell division are orchestral in nature: Orchestral Flute, Brass Choirs I and II, and Orchestral Oboe. They may be activated by first depressing the "Orchestral Voices On" stop tablet and then selecting the voice of your choice.

Note that the percussion sustain control affects only the sustain characteristics of the Alterable Voice. The sustain for the percussion Second Voices is preprogrammed and cannot be adjusted.

ALTERABLE VOICES

The Alterable Voice stop is an exclusive Allen feature that enables the organist to add hundreds of stops to the organ's stoplist. A bright Trumpet 8', for example, could be programmed for special festive occasions. A classic flute or reed voice especially suited for a certain piece can be programmed. Any number of percussion voices--including chimes, bells, and harp--can be used as desired.

One Alterable Voice is standard on the MDS-50. The tablet for this stop is located in the Swell division. To program an Alterable Voice, simply depress the stop tablet and insert the desired computer card with the printed side up and the arrow pointing toward the slot. Stop feeding the card when resistance is felt (about 1" of the card remains outside of the slot). The card should then be removed.

Turning off the organ will not cancel the Alterable Voice--the same voice will still be there when the organ is turned back on. To change an Alterable Voice to another voice, simply depress the Alterable stop tablet and insert the card of your choice. The previously programmed voice will be automatically erased.

Through the use of special couplers, labeled "Alterable to Great," "Alterable to Choir," and "Alterable to Pedal," it is possible to couple the Alterable Voice independently to any division. This is what is meant by the term *floating*. If the organist wanted to add a special 4' reed to the Pedal division, for example, he or she could do so by depressing the Alterable stoptab, inserting the appropriate tone card, then adding the "Alterable to Pedal." The new 4' reed would sound on the Pedal. Because the Alterable Voice tablet is located in the Swell division, the Alterable Voice will play on the Swell whenever the Alterable Voice stop tablet is pushed down. The other Swell stops will not couple with the Alterables unless the Swell coupler is also drawn; therefore, in the preceding example, any other stops drawn on the Swell will now sound only on the Swell, and the Alterable will sound on the Pedal and on the Swell. Keep in mind that the Alterable is affected by the Tremulant in the Swell, and it is controlled by the Swell expression pedal, even if it is coupled to the Great, Pedal, or Choir.

Alterable Voices are available in a wide variety of tones and pitch levels. The Alterable Voice computer cards are color-coded by families: red cards are reeds, green are percussions, yellow are strings, and white are flutes or diapasons. More information about specific cards and their uses is available in the Tone Card Library Catalog. We think that you will find the Alterable Voice to be one of the most interesting developments in the history of organ design. The unprecedented

flexibility that it offers brings new excitement to organ registration and a built-in protection against obsolescence.

PERCUSSION VOICES

Green computer cards are for percussion voices. Program them like any other Alterable Voice, then add the Alterable "Percussion" tablet. This will add the attack and decay characteristics appropriate to sounds of this type. A percussion length knob on the console adjusts the length of the decay for percussion voices, thereby increasing the authenticity of the sound. The decay should be shorter for a harpsichord, for example, than it would be for chimes.

NOTE ABOUT IMITATIVE ORCHESTRAL VOICES

Many true orchestral tones are available for the Computer Organ with Alterable Voice cards. In most instances, these voices have been obtained directly from the instrument involved. In using them, one should keep in mind the normal range of the particular instrument. The Oboe, for example, has Middle "C" as its lowest note. Its natural range extends upwards about two and a quarter octaves. When you program this voice into the Computer Organ, however, you have a *five-octave* range. The voice will sound most authentic when played in its natural range. Played toward the ends of the keyboard, either extremely low or high, the tone will sound less authentic, since the Oboe is incapable of producing these notes.

A general rule for using imitative orchestral stops is to adhere as closely as possible to the natural compass of these instruments.

TRANSPOSER

The vast capability of the computer makes it possible to perform the sometimes difficult task of transposing while allowing the organist to play in the notated key.

Operation of the Transposer is controlled by the Transposer knob. Neutral (no transposition) position for this knob is marked "N."

To shift the music to a higher key, move the knob upward one or more half-steps. The key can be raised a maximum of five half-steps, in half-step increments.

To shift to a lower key, move the Transposer knob downward from "N." The key can be lowered a total of seven half-steps.

A RED LIGHT COMES ON WHENEVER THE TRANSPOSER KNOB IS MOVED FROM THE "N" POSITION.

WHY TRANSPOSE?

1. Because the range of a given song will not always suit the vocal range of a particular singer. By adjusting the key upward or downward, whichever is appropriate, the piece can be sung more comfortably and effectively.
2. Because some instruments are non-concert pitch. A trumpet in B^b, for example, can read the same music as the organist, if the Transposer knob is set two half-steps lower.
3. Because hymn singing can sometimes be improved by a more favorable key selection. Hymn singing can also be enhanced by playing the hymn in its original key, playing a short modulation at the end of the stanza that leads into the key one-half step above the key in which the hymn is written, then turning the Transposer up a half-step for the next stanza. In this way, the organist can play the next stanza in its original key, and it will sound one-half step higher. If the hymn is already in a fairly high key, it may be preferable to play the first few stanzas with the Transposer set *down* one-half or one whole step, then modulate up to the original key for the final stanza. The use of modulation with the aid of the Transposer can create a climactic effect for the final stanza of a hymn.

CONSOLE CONTROLLER™

I. BASIC OPERATION

- A. Moving through the windows
- B. Selecting the four capture memories
- C. Setting pistons
- D. Locking capture memories
- E. Unlocking capture memories
- F. Setting the clock
- G. Automatically checking the capture and stop action

II. ADVANCED OPERATION

- A. Changing the way in which pistons work
- B. Setting your own Crescendo and Tuttis
- C. Restoring factory settings

III. MIDI OPERATIONS

- A. Saving capture memory to a sequencer
- B. Resetting the MIDI base channel
- C. MIDI expression settings
- D. MIDI program changes
- E. Transmitting stop data

I. BASIC OPERATION

A. MOVING THROUGH THE WINDOWS

1. When the organ is turned on, you will see this display in the Controller window:

MEM - 1
(hours, minutes, seconds)

This is the first window.

2. Press and hold the "Set" piston, and then press and release the "R" piston, which advances the Controller to the next window. Every time you press the "R" piston you will see an additional window--a total of twelve, including the first one.
3. To return to the first window at any time, press and hold "Set" and then press and release the "Cancel" button.

B. SELECTING THE FOUR CAPTURE MEMORIES

1. Return to the first window for this operation.
2. Find the two buttons marked with the up and down arrows on the Console Controller. As you press either one of these, you will see that you can scroll through memories 1, 2, 3, and 4. NOTE: Memory 4 has been programmed at the factory with combinations on all pistons, although it may be reprogrammed by the user. If memory 4 is changed, the original factory memory is stored and can be recalled by using the tenth window, "Re-initialize Factory Settings".

C. SETTING PISTONS

First window.

1. Allen's quadruple memory system allows an organist to set four complete groups of piston combinations covering the entire organ, or each of several organists to set and lock his own combinations on one memory. Select the capture memory you want to use by pressing the up arrow or down arrow buttons on the Console Controller.
2. Then choose a stop combination that you wish to place on General Piston 1, for example. General pistons are found on the left side of the console underneath the keyboards and are numbered 1 through 10. Remember that generals are customarily set using graduated stop combinations from soft to loud. After you have selected your stops, press and hold the "Set" button and then press and release General Piston 1. Release the "Set" button. From now on, General Piston 1 will bring on that combination, until someone changes it.
 - a. The groups of six pistons located in the center of the console affect only the stops for the keyboard directly above them. Follow the same procedure to set these divisional pistons. You can go through the whole organ this way.
 - b. The group of six toe studs marked "Ped-1" through "Ped-6" are used to set combinations for the Pedal division. They are set by pressing and holding "Set" and then pressing the selected toe stud with the foot.
 - c. The intermanual couplers (e.g., Swell to Great) can be set only on the general pistons. They are not affected by the divisional pistons, unless you reconfigure the pistons as described in section II.A.

D. LOCKING CAPTURE MEMORIES

First Window.

1. Memories 2, 3, and 4 can be locked to prevent unintentional or unauthorized changes. To do this, you must choose a three-digit code, such as 1-2-3, 6-5-4, etc. Any combination of three numbers will do. Set your desired combinations first, then press and hold the Memory button (the word *Memory* is printed underneath it) on the Console Controller. Enter your three numbers by using the General Pistons 1 through 10 as a typewriter (use Piston 10 for zero digit). Release the "Memory" button. An "L" will appear next to your memory number in the window, indicating that the memory is now locked. As long as it remains locked, no one can change your piston settings on that memory; however, other organists will still be able to use the combinations in the locked memory. It is important that you remember your personal code.

E. UNLOCKING CAPTURE MEMORIES, EVEN IF YOU FORGET YOUR CODE

1. You must be in the first window to unlock a memory using your secret code.
2. Choose the memory you wish to unlock by using the up arrow or down arrow buttons. Press and hold the "Memory" button on the Console Controller and enter your three-digit code by using the General Pistons 1 through 10 as a typewriter (use Piston 10 for zero digit). Release the "Memory" button. The "L" will disappear, indicating that the memory is now unlocked.
3. Use the following procedure if you forget your code number. Scroll through to the last window. The display will read:

UNLOCK ALL CAPTURE MEMORIES.

Press and hold the "Memory" button on the Console Controller and press General Pistons 2-5-5. Release the "Memory" button, and the window now reads "Done!". All capture memories are now unlocked, including memories that other organists may have locked. This will not change your piston settings.

F. SETTING THE CLOCK

Ninth window.

1. Advance to the window that reads:

SET CLOCK
0:00:00

2. Use the up arrow and down arrow buttons to change the digits and the "<" and ">" buttons to move from hours to minutes. THE CLOCK ALWAYS RESETS THE SECONDS TO ZERO WHEN YOU USE SET AND CANCEL TO ESCAPE FROM THIS WINDOW.

G. AUTOMATICALLY CHECKING THE CAPTURE AND STOP ACTION

Eleventh window.

1. Advance to the window that reads:

SELF-CHECK
(GREAT-1)

2. This is a self-check of the capture system to see that every individual stop is controllable by the capture action. The self-check is started by pressing Great Piston 1. The stops will move consecutively down and up or out and in. If any stop does not move, notify your service technician. You may interrupt the scanning process at any time by pressing and holding "Set" and then pressing the "Cancel" button.

IN BRIEF

1. Moving through the windows: first window. Hold "Set", press "R".
2. Return to the first window: hold "Set", press and release "Cancel".
3. Setting Pistons: hold "Set", press the piston you want.
4. Locking a capture memory: first window. Select desired memory using up or down buttons. Hold "Memory" button, enter three-digit code, release "Memory" button. "L" will appear.
5. Unlock a capture memory: repeat 4. above.
6. Unlock all memories without code: twelfth window. Hold "Memory" button, press General Pistons 2-5-5, release "Memory" button.
7. Set the clock: ninth window. Use up and down arrows. Use "<" and ">" to move from hours to minutes.
8. Check capture and stop action: eleventh window. Press Great Piston 1. Hold "Set", press "Cancel" to interrupt.

II. ADVANCED OPERATION

A. CHANGING THE WAY IN WHICH PISTONS WORK

Seventh window.

1. This operation allows pistons to be reassigned to stops that are different from the factory settings. Some examples are: (1) divisional pistons can be changed to become general pistons; (2) intermanual couplers, which are not normally operable from divisional pistons, can be reassigned to divisionals; (3) a divisional piston can be reconfigured to be used for only the Tremulant and/or Vibrato stops in all divisions.
2. Advance to the window display that reads:

CONFIGURE PISTONS

- a. Turn on any stops that you want to be able to capture with the reconfigured piston(s). In the case of converting divisionals to extra generals, you would put on all the stops. Please note that reverb is never included in the capture system. (You may wish to press the divisional piston first to see what stops it is currently affecting.)
 - b. While holding the "Set" piston, press any divisional pistons that you want to convert to the new configuration. Once a piston has been converted, you can verify your settings by pressing the reconfigured piston to see what stops it now affects. NOTE: Changing the configuration of a piston will not affect combinations previously set in the capture memory.
 - c. Return to the first window and set new combinations as described in section I.C. NOTE: Steps a. and b. above only determine which stops can be accessed by the reconfigured pistons; they do not capture them.
3. Sit at the console and actually go through the process in the following example of adding the Swell to Great coupler to the Great pistons:
 - a. Be sure that the "Configure Pistons" window is displayed.
 - b. Put on all the Great stops and the Swell to Great coupler.
 - c. Hold "Set" while consecutively pressing all the Great pistons.
 - d. Press "Set" and "Cancel" together to get back to the first window.

- e. Note that your original capture settings for the Great pistons are still intact. As reconfigured in this example, however, you can now reset them with new combinations that can include the Swell to Great coupler. NOTE: Steps b. and c. above only enable the coupler to be captured by the Great pistons. It is not necessary to include it in all of your stop combinations if you do not wish to do so.
4. Remember that you can always return to the factory settings via the "Re-initialize Piston Configuration" window.

B. SETTING YOUR OWN CRESCENDO AND TUTTIS

Sixth window.

1. In addition to the factory settings, there is a second set of Tuttis and a second Crescendo available that can be altered to suit the organist. Advance to the window that reads:

SET SECONDARY CRESC. AND TUTTIS

Now slowly depress and pull back the Crescendo pedal and you will see the stoptabs or drawknobs move in response to the pedal movement. Press "Tutti I" and "Tutti II" to see what stops each of them brings on.

2. There are 22 positions to set in the Crescendo. They correspond to General Pistons 1-10 (Cresc. positions 1-10), Great Pistons 1-6 (Cresc. positions 11-16), and Swell Pistons 1-6 (Cresc. positions 17-22). Set each position as you would set the capture action, starting with General Piston 1. Keep in mind that you must set every position. It is normal to progress from soft settings to louder ones. For each new position, you merely add the new stop(s) that you want to include. You can use all controls on the organ, including celestes, tremulants, and vibratos; however, celestes and tremulants are automatically disabled when the louder stops, such as reeds or mixtures, are added. NOTE: SETTINGS FOR THE CAPTURE ACTION ARE NOT AFFECTED BY SETTING THE CRESCENDO.
3. The Tutti pistons are set like general pistons. Select manually the desired stop combination. Press and hold "Set", and then press the Tutti piston you wish to change. The new setting is now memorized and can be accessed under normal playing conditions by pressing the "Cres. B" piston and then pressing the Tutti piston of your choice when it is needed.

C. RESTORING FACTORY SETTINGS

Tenth window.

1. Advance to the window that reads:

RE-INITIALIZE
PISTON CONFIG.

There are certain functions that can be restored to the original factory settings. They are: Piston Configuration, Tutti B settings, Crescendo B settings, Capture Memory 4, and MIDI settings.

2. Choose the factory setting that you wish to restore by using the up arrow and down arrow buttons on the Console Controller. Press and hold the "Memory" button and press General Pistons 2-5-5 in sequence. When the window reads "Done!", the factory settings for that particular function have been restored.

IN BRIEF

1. Reconfiguring pistons: seventh window. Select desired stops. Press and hold "Set", press divisional piston. Return to first window and set new stop combinations as desired using procedure described in section I.C. above.
2. Set secondary Crescendo: sixth window. Set stops in all 22 positions (Generals 1-10, Great 1-6, and Swell 1-6), just as you would set capture action. **YOU MUST FILL ALL 22 POSITIONS.**
3. Set secondary Tuttis: sixth window. Select stops. Press and hold "Set", touch the Tutti piston you want to set.
4. Restore factory settings: tenth window. Use up arrow and down arrow buttons to select the settings you want to restore. Press and hold "Memory" button, press 2-5-5 using general pistons.

III. MIDI OPERATIONS

The following information deals with the MIDI capabilities of your organ. The usefulness of these operations will ultimately be determined by the type and capabilities of the particular external MIDI devices--e.g., sequencers, samplers, and external keyboards--being used. Knowledge of these operations is not required for normal service playing or everyday use of the organ.

A. SAVING CAPTURE MEMORY TO A SEQUENCER

Eighth window.

1. With this operation the organist can save all four capture memories (piston settings, Cresc. B, and Tutti B settings) to a digital sequencer. The window display reads:

CAPTURE MEMORY SAVE

Set your sequencer to the record mode and begin to record as you would normally. Press and hold the "Memory" button on the Console Controller and press General Pistons 2-5-5. Capture data will then be transmitted to the sequencer. The window will read "Done!" when transmission is complete.

2. To place capture information into the organ from your sequencer, you simply "play" it from the sequencer into the organ as you would a piece of music.
3. NOTE: It is not necessary to unlock your capture memories in order to save them to a sequencer; however, you must unlock the memories in order to place capture information into the organ from the sequencer. Use window 12 to unlock all capture memories as described in section I.E.3.

B. RESETTING THE MIDI BASE CHANNEL

Second window.

1. The base channel for the MIDI interface is normally set to channel 1. This operation permits you to change the MIDI base channel setting. Advance to the window that reads:

MIDI BASE
CHANNEL = 1

Following are the default (normal) settings for the MIDI channels:

<u>MIDI Channel</u>		<u>Organ Division</u>
1	=	Swell
2	=	Great
3	=	Pedal
4	=	Choir (if applicable)
5	=	Ancillary (if applicable)
6	=	Not Used
7	=	G1 and G2 pistons
8	=	General Pistons

All functions associated with any particular manual will transmit and receive on its assigned channel; for example, MIDI channel 1 is normally assigned to the Swell; therefore, key on/off messages, program changes (divisional pistons), and the Swell expression will be transmitted and received on channel 1.

2. Use the up arrow and down arrow buttons to change the base channel; for example, if the base channel is reset to "2", all the channels will move higher by one, so that the last channel would be channel 9.
3. NOTE: Channel numbers will wrap, i.e., channel numbers go only to 16 and will then repeat to 1. FOR NORMAL USE, DO NOT USE A BASE CHANNEL ABOVE 9.

C. MIDI EXPRESSION SETTINGS

Third window.

1. Advance to the window that reads:

MIDI EXPRESSION
POLY - VOLUME

There are four modes for transmitting expression data via MIDI. They are changed by using the up arrow and down arrow buttons on the Controller.

- a. Poly - Volume: this is the default (normal) mode. If the MIDI base channel is set to 1 as described in section B above, the Swell expression shoe will send its expression data on channel 1. Channel 2 would carry Great expression data, etc. This is the proper mode to use when recording to, or playing back from, a sequencer.

- b. Poly - Velocity: should be selected if you are using a percussion-type voice from an external MIDI keyboard; for example, if a digital piano sound were played from the organ keyboard through channel 1, the piano could be made to sound more realistic. By depressing the Swell pedal, the piano "strings" would appear to be struck "harder" than when the Swell pedal was in the closed position. NOTE: When in this mode, all expression information is sent in key velocity form. Changes in velocity will occur only when a new key is struck; consequently, if you change the position of the Swell pedal after a key is struck, there will be no change in velocity until a new key is struck. Use this mode only when an external keyboard is connected. If this mode is used when recording to a sequencer, the expression on the organ will not function when playing back from the sequencer.
- c. Swell - Volume: will send MIDI expression data only on the Swell MIDI channel.
- d. No Expression: cancels transmission/reception of expression data.

D. MIDI PROGRAM CHANGES

Fourth window.

1. Advance to the window that reads:

MIDI PROGRAM CHANGE
PRESET P-CHANGE

There are three options available from this window. They are selected by using the "<" and ">" keys on the Console Controller.

- a. Preset: the default (normal) setting, allows your piston changes to be recorded by a sequencer. The divisional pistons (1-6) for each division will send program changes 1-6 on their respective channels; for example, Swell Piston 1 would send program change 1 on channel 1. Great Piston 2 would send program change 2 on channel 2, etc.
- b. No: cancels transmission and reception of program change data.
- c. User: allows you to select program changes, such as sounds from a remote MIDI keyboard that responds to program change information. Program changes other than the preset ones can be assigned to any piston, including generals. To change a program number, press the piston you wish to change. Use Swell 1 for this example. Note that the display changes to read:

SWELL 1=> ---
USER P-CHANGE

This shows the piston pressed and the program number being sent by that piston. Use the up arrow and down arrow buttons to raise and lower the program number. The program number (1-128) will be transmitted on the channel assigned to the division from which you selected the piston; in this case, the Swell on channel 1.

E. TRANSMITTING STOP DATA

Fifth window.

1. Advance to the window that reads:

TRANSMIT/RECEIVE
STOPS = ON

2. This operation allows the organist to turn off the transmission and reception of individual stop data, known in MIDI terminology as "Non-Registered Parameters". In some cases, individual stop data from the organ may conflict with data from an external MIDI keyboard. When this occurs, select the "off" position by pressing the up arrow or down arrow buttons. NOTE: Piston changes will still be transmitted and received, because they are program changes.


PERFORMANCE RECORDER™

OPERATING INSTRUCTIONS

Some Allen Organs that are equipped with a Console Controller™ also include an internal sequencer, called the Performance Recorder™, which is able to record and play back notes, expression, and registration information. Recordings can be made from the Allen console or from an external MIDI device connected to the console.

ENTERING THE SEQUENCER MODE

All operations of the Performance Recorder™ are done through the Console Controller™ buttons. To use the sequencer, press the Console Controller™ button marked "RECORD." The Console Controller™ display window will read:

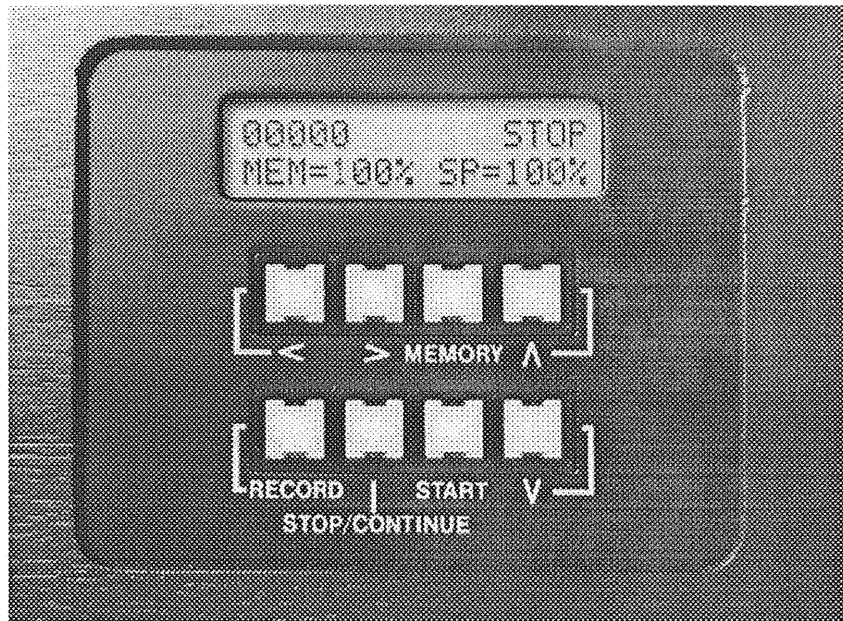

RECORDING

START RECORDING

To start the recording process, press and hold the button marked "RECORD" (lower left) and momentarily depress the button marked "START." You may now register the organ and begin to play.

CAUTION! ANY PREVIOUSLY RECORDED MATERIAL WILL BE ERASED. Note: At the beginning of a recording, the sequencer automatically checks which stop tablets or drawknobs are currently engaged, as well as the current expression pedal, Crescendo pedal, and Tutti settings. Therefore, to minimize automatic registration time during playback, set your registration before starting the recording process. This information is then placed at the beginning of the recording. Upon playback, the organ is automatically returned to the same settings that were in effect at the beginning of the original recording. The reverb stop is not activated by the capture action.

STOP RECORDING

After you have finished playing, press the button marked "STOP/CONTINUE" to end recording.

RESUME RECORDING

You may record additional material while retaining previously recorded material.

1. Position the sequencer at the end of the last recording that is to be retained. (See "POSITIONING THE SEQUENCER" below.)
2. Select registration for the beginning of the next recording.
3. Press and hold the "RECORD" button and momentarily depress the "STOP/CONTINUE" button to resume recording.

Note: Any material from a prior recording located past the recording resumption point will be erased by this procedure. Current registration and expression, Crescendo, and Tutti settings are automatically inserted at the beginning of each recording segment. Recordings will be retained even if organ is turned off.

PLAYBACK

IMPORTANT - Make sure the expression pedals are fully depressed before starting any playback sequence.

BEGIN PLAYBACK

To play back all previously recorded material, press the button marked "START."

STOP PLAYBACK

Press the button marked "STOP/CONTINUE."

CONTINUE PLAYBACK

To continue playing when the sequencer is stopped at a given point, press the button marked "STOP/CONTINUE."

Note: When resuming playback from any point after the starting point of a recording, the organ will not automatically select registrations at the resumption of playback. BE SURE THE APPROPRIATE STOPS HAVE BEEN SELECTED before resuming playback from within a recording. If capture pistons were used during recording, be sure the same capture memory (1, 2, 3, or 4) is used during playback.

POSITIONING THE SEQUENCER

Use the following procedure to select the point in an existing recording at which playback or subsequent recording will begin.

When the sequencer is stopped, the "<" and ">" buttons on the Console Controller™ may be used to decrease or increase the sequencer counter value, shown in the upper left-hand corner of the display window. Think of these two buttons as having the same functions as the "Rewind" and "Fast Forward" buttons on a tape recorder. During recording, the counter increases at a rate of one count per second. Playback or Record may be resumed from any counter position specified. (See below.)

Recording can be resumed by pressing and holding the "RECORD" button and then momentarily pressing the "STOP/CONTINUE" button. Playback can also be resumed by pressing the "STOP/CONTINUE" button alone.

CHANGING PLAYBACK SPEED

When the sequencer is stopped, or during playback, the playback speed can be gradually increased or decreased by using the "^" and "v" buttons. The playback speed ranges from 50% to 200%, with the original recorded rate being 100%. Changes are made incrementally and remain in effect until further adjustments are made or until the organ's AC power is turned off. Turning off the organ's AC power will automatically return playback speed to the originally recorded speed (100%).

During playback, you can momentarily alter playback speed by pressing and holding the "<" button to reduce the playback speed instantly to 50% of the recorded speed. Releasing this button returns playback to its original speed. Pressing and holding the ">" button during playback will instantly increase playback speed to 200% of recorded speed. Releasing this button also returns playback to its original speed. This process is especially useful in scanning an existing recording to find a desired point for subsequent resumption of playback or recording. Upon reaching the desired point in the recording, press the "STOP/CONTINUE" button to stop the playback.

RECORDING AN EXTERNAL MIDI DEVICE

Input from an external MIDI device can be recorded to the sequencer. Make sure the MIDI OUT of the external device is connected to the Allen Organ MIDI IN. The same rules apply when recording from an external MIDI device using the organ's internal sequencer.

Note: The external MIDI device's current tonal and expression settings are not recorded automatically at the beginning of recordings. For this reason, it is best to begin recording before setting registration and expression levels of external devices.

For the external MIDI keyboard or box to sound on playback, the MIDI stop for the appropriate division on the organ must be turned on, and the MIDI OUT of the organ must be connected to the MIDI IN of the external device. The audio output of the device must also be connected to an audio system.

CAUTION! Make sure that the external MIDI device has been properly programmed to transmit the types of messages desired (program changes, control data, etc.) before recording is started.

EXITING THE SEQUENCER

To exit from the sequencer and return to normal play mode, press the button marked "MEMORY" on the Console Controller™ panel.

MUSIC MEMORY™


Many Allen Organs equipped with Performance Recorder™ also include pre-recorded demonstrations of a variety of tonal combinations and musical styles called Music Memory™. To access these recordings, advance the Console Controller™ to the "DEMO/SELF-CHECK" window by first pressing the "Set" and "Cancel" pistons together. Then, while holding in the "Set" piston, repeatedly press the "R" piston until the "DEMO/SELF-CHECK" window appears. If you inadvertently go past this window, press the "Set" and "Cancel" pistons and start again.

Within the "DEMO/SELF-CHECK" window, the demo recordings may be accessed through the Swell pistons. Swell Pistons 1 through 5 begin Demo recordings 1 through 5 respectively. Swell Piston 6 acts as a stop/continue switch for stopping or continuing any of the Demos. To skip directly to a different Demo, merely press the desired piston number which will interrupt the existing Demo and automatically start the new one. Note: Demo 4 contains two selections.

To exit the Demo window, press the "Set" and "Cancel" pistons together and release. This returns the Console Controller™ to its normal playing mode.

CAPTURE COMBINATION ACTION

Organs equipped with Allen's Quad Memory Capture Action offer the ultimate in registration control and convenience. Quad memories provide a total of 120 separate combinations. The organist can set combinations on any memory and then lock the memory (except Memory 1) using a three-digit code. This prevents unwanted tampering with capture combinations. See the section on the Console Controller™.

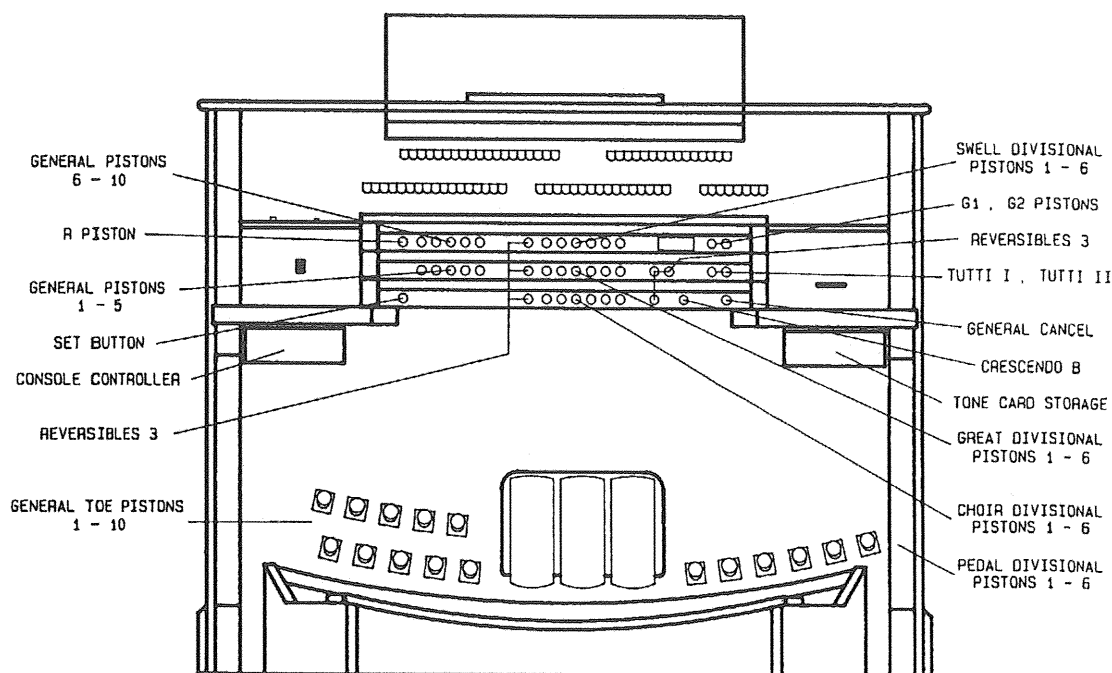

THINGS TO REMEMBER

The "R" Piston, when activated, will recall the last combination set prior to using any general or divisional piston.

"G1" and "G2" are divisional pistons that affect only the General stops.

General pistons (all of which are duplicated by toe studs) affect all stops. Swell, Great, Choir, and Pedal pistons affect only stops in their division. Interdivisional couplers (Swell to Great, Swell to Choir, Swell to Pedal, Great to Pedal, Choir to Great, and Choir to Pedal) operate from the general pistons only, not from divisional pistons.

Pedal pistons are available only on toe studs.

All pistons operate independently from each other.

Tutti I and II are reversible (i.e., pressing once will activate either Tutti; pressing again will deactivate).

The capture action is not fully operable until approximately six seconds after the organ is turned on.

INSTALLATION, VOICING, AND CARE OF THE ORGAN

INSTALLATION

Wherever your MDS-50 organ may be situated, careful installation is a prerequisite to successful results. Your Allen representative is well qualified to guide you in planning for this.

Factory assistance in planning the installation is also available and may, in fact, be sought by your representative, in order that optimal results may be achieved.

VOICING

The MDS-50 organ enjoys unprecedented accuracy in the scaling and voicing of each note of every stop. This musical breakthrough is an inherent part of the engineering design of the instrument. Final adjustments in scaling and voicing involve controls within the console and are best left to an expert. These adjustments are normally a part of installation and, once done, should not require changes unless the instrument is moved to a new location.

Bass frequency projection is strongly affected by tone cabinet location. Although none of the tone cabinets should be moved once the installation has been completed, extra care should be exercised to prevent inadvertent movement of the bass tone cabinets.

REVERBERATION

The ADR-4 Digital Reverberation System provides the spatial ambience of a large reverberant auditorium. Although most effective in poor acoustic environments, it even enhances the tones in an ideal acoustic setting.

The Reverb stop is not affected by the capture system.

Adjustment of reverberation can be accomplished by your service technician or sales representative.

CARE OF THE ORGAN

Your Allen Digital Computer Organ constitutes a major advance in long-term maintenance-free operation. There are no regular maintenance procedures required and, therefore, no periodic maintenance schedules to be observed.

Reasonable care will keep the instrument looking beautiful for years to come. If desired, polish the wooden portions with a high-grade furniture wax. *Do not* use abrasive polishes, cleaners, or waxes containing silicone.

Keys and stop tablets should be cleaned in the following manner: Use two clean cloths. Immerse one in clear, lukewarm water and wring it thoroughly damp dry. Loosen the dirt with this cloth, then polish immediately with the dry cloth. Do not use soap or detergent on keys or stop tablets.

You have purchased a remarkable organ that not only faithfully reproduces the organ traditions of the past but also anticipates the innovations of the future. Should you have questions that are not addressed in this manual, please do not hesitate to contact your local Allen Organ representative. Welcome to the family of satisfied Allen Organ owners!

USA ONLY

CAUTION

Do not plug the instrument into any current source other than 105-128 volts, 50/60 Hertz alternating current (AC). A verified grounded outlet is essential to proper operation and protection of the instrument. Proper polarity should be checked with an AC circuit analyzer before connecting the organ.

Do not change the cable plug or remove the ground pin or connect with a two-pole adapter.

If you are in doubt about your electrical connection, consult your local electrician or power company.

In churches where circuit breakers are turned off between worship services, the circuit breaker affecting the organ console AC power should have a guard installed to prevent its being accidentally switched off.

Read and comply with all instructions and labels that may be attached to the instrument.

Warning: This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been type tested and found to comply with the limits for a Class B Computing Device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. Should this equipment cause interference to radio communications, the user at his own expense will be required to take whatever measures may be necessary to correct the interference. Whether this equipment actually causes the interference to radio communications can be determined by turning the equipment off and on. The user is encouraged to attempt to correct the interference by one or more of the following measures:

Reorient the receiving antenna.

Relocate the organ with respect to the receiver.

Move the organ away from the receiver.

Plug the organ into a different electrical outlet, so that the organ and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio technician for additional suggestions.

CE mark shows compliance with the EMC Directive.

Warning: This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been type tested and found to comply with the limits for a Class B Computing Device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. Should this equipment cause interference to radio communications, the user at his own expense will be required to take whatever measures may be necessary to correct the interference. Whether this equipment actually causes the interference to radio communications can be determined by turning the equipment off and on. The user is encouraged to attempt to correct the interference by one or more of the following measures:

Reorient the receiving antenna.

Relocate the organ with respect to the receiver.

Move the organ away from the receiver.

Plug the organ into a different electrical outlet, so that the organ and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio technician for additional suggestions.

CE mark shows compliance with the EMC Directive.

ADDENDUM

BATTERY BACKUP SYSTEM

The memory for the capture system on your MDS organ is sustained by a Lithium battery. This allows capture settings and related items to be retained in memory when the organ is switched off or unplugged. Under normal circumstances, the Lithium battery should last for several years. A built-in warning system will alert you when the battery becomes weak and needs to be replaced.

On Allen MDS organs that include a Console Controller™, the LCD display will flash a warning message for a few seconds during power-up when the battery requires replacement. The display will read as follows:

WARNING!!
Replace Battery

On Allen MDS organs without a Console Controller™, the green power light will flash for about ten seconds after the organ is switched on.


Should the battery in your MDS organ require replacement, contact your local Allen authorized service representative.

ADDENDUM TO MIDI INFORMATION

TOTAL MIDI PLUS™

Some MDS-15 and larger Allen organ models now feature Total MIDI Plus™, an expanded MIDI system with increased flexibility. Through the use of Allen's SmartMIDI™, Total MIDI Plus™ provides a comprehensive interface between MIDI sound modules such as the Allen MDS-Expander™, and digital sequencers. Two MIDI out ports, one switched and one unswitched, allow unprecedented control over external MIDI devices attached to the organ.

Under normal circumstances, MIDI sound modules should be connected to the switched MIDI port labeled MIDI OUT 2. Doing so allows the organist to disable the sending of MIDI data from the organ to the sound module. Devices such as MIDI sequencers should be connected to the unswitched MIDI port labeled MIDI OUT 1, eliminating the necessity of having to draw the MIDI stop controls before recording a digital sequence. Refer to the drawing below for information on the proper procedure for connecting multiple MIDI devices to the organ.

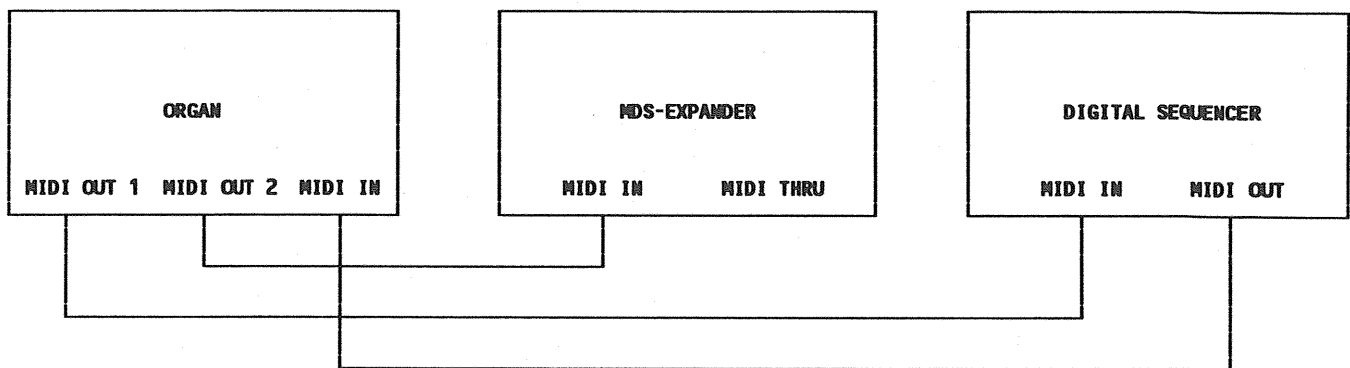

A Church Organist's Primer

PARTS I, II & III — all on one DVD!

PART I: MANUAL AND PEDAL TECHNIQUE

PART II: REGISTRATION

PART III: HYMN ACCOMPANIMENT



For the pianist or keyboard player who wants to learn to play the organ

**NOW AVAILABLE
ON ONE DVD
FOR \$29.95**

For ordering call Allen Organ at 610-966-2202
or visit www.allenorgan.com



Instructor:
Dr. Sally Cherrington

PART I: MANUAL AND PEDAL TECHNIQUE *Length: 32:00*

Respected organ instructor Sally Cherrington explains and demonstrates the basic elements of manual technique, pedal technique and notation, understanding console controls, and playing hymns and the liturgy.

PART II: REGISTRATION *Length: 56:25*

Part II of this acclaimed series introduces the student to the art of selecting stops appropriate to a wide variety of organ literature from various historical periods and traditions.

PART III: HYMN ACCOMPANIMENT *Length: 85:00*

Part III introduces the student to accompaniment techniques for a wide variety of hymnody from traditional to gospel to contemporary. Examine a variety of hymnals from major denominations. Learn secrets to indexes for cross-referencing subject, author, composer, and source. Find out what works and what doesn't in leading group singing. Discover a wealth of source materials for a rebirth of congregational singing in your church. Even pianists and other keyboardists will learn valuable skills. After viewing this DVD, you'll never play a church service the same way again.

**A Church Organist's Primer
Parts I, II & III**

\$29.95 each

*Order 5 or more for a special
price of \$15.00 each!*

- P/N 031-00092
NTSC (American TV) version
- P/N 031-00093
PAL (European TV) version

NOTE: Both DVDs plays in all PCs and laptops
regardless of country's TV standard



Allen Organ Company LLC
150 Locust Street, P.O. Box 36
Macungie, PA 18062-0036 USA
E-mail: aosales@allenorgan.com
Web site: www.allenorgan.com
AOC © 2007

Note: The content of this DVD was previously
available on Videocassette.